Type 1592

en **Operating Instructions**
Cordless Hair Clipper

1592-1150 · 09/2013

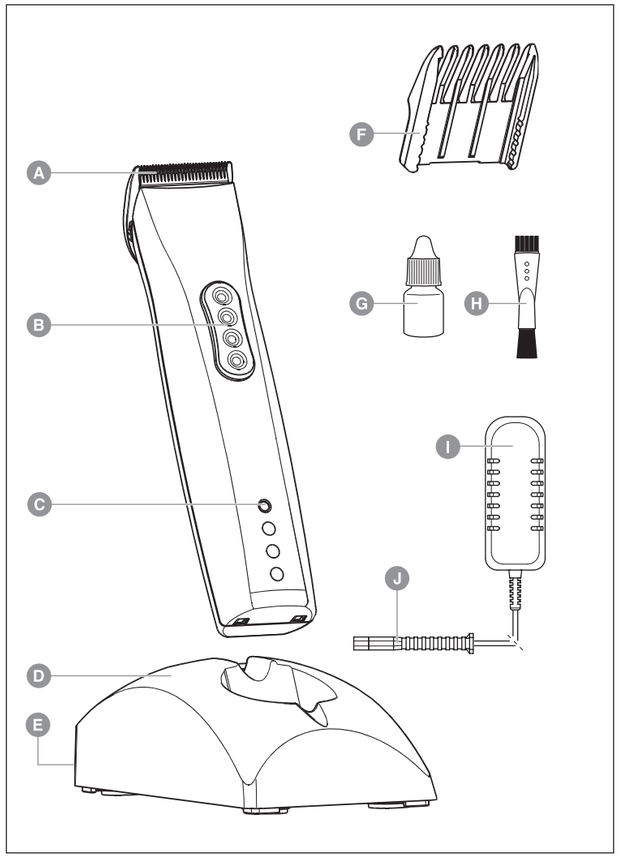

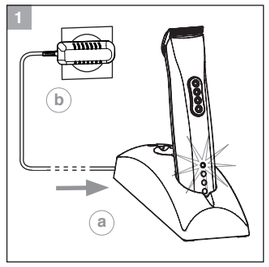

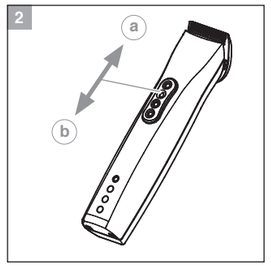

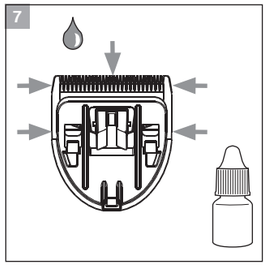

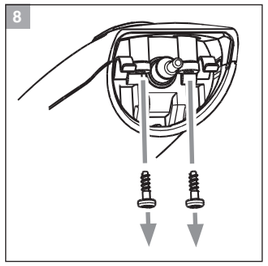

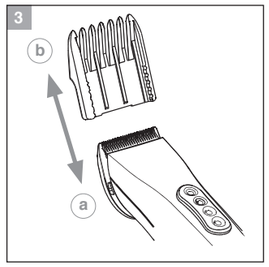

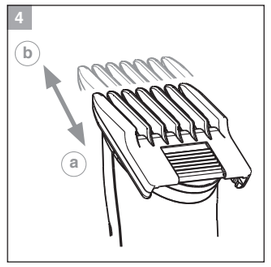

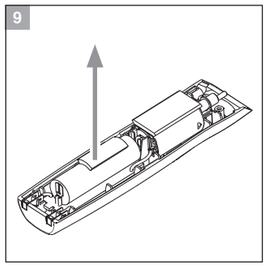

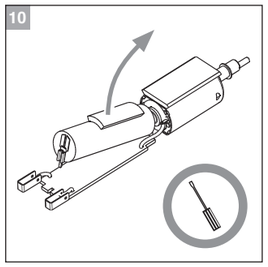

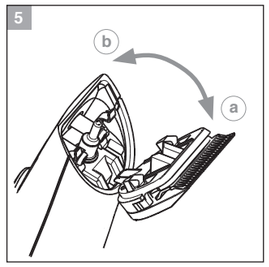

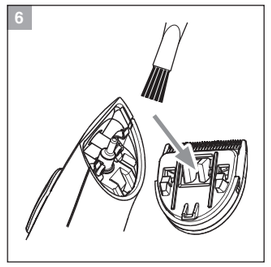

en ENGLISH

Description of parts
A Blade set
B On/off switch
C Charging indicator
D Charging stand
E Charging stand socket
F Attachment comb
G Oil for blade set
H Cleaning brush
I Plug-in transformer
J Appliance plug

Important safety information
For your own protection from injuries and electric shocks, the following information must be observed when using electrical equipment:

Read all the instructions before using the appliance!
- Only use hair clippers to cut human hair.
  Only use animal clippers to cut animal hair and animal fur.
- Only connect the appliance to an AC mains power supply. Note the rated voltage on the rating plate.
- Warning: Keep the equipment dry!
- Never touch electrical equipment that has fallen into water. Disconnect from the mains immediately.
- Never use electrical equipment in the bath or under the shower.
- Always position or store electrical equipment where it cannot fall into water (e.g. washbasin). Prevent electrical equipment from coming into contact with water and other liquids.
- Apart from when charging, always disconnect from the mains immediately after using the appliance.
- Disconnect from the mains before cleaning the appliance.
- This appliance is not suitable for use by people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance, unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety. Children should be supervised to ensure they do not play with the appliance. Only use the appliance for the proper use as described in the operating instructions. Only use accessories recommended by the manufacturer.
- Never use the appliance if the mains cable or plug-in transformer is damaged. If the cable is damaged, it has to be replaced by the manufacturer, its customer service or by similarly qualified persons in order to avoid dangers.
- Do not use the appliance if it is not working correctly, if it is damaged or if it has fallen into water. In these cases, send the appliance to our Service Centre for inspection and repair. Only specialists properly trained in the handling of electrotechnical appliances may repair electrical equipment.
- Do not hold the appliance by the mains cable to carry it, and do not use the cable as a handle.
- Keep the mains cable and appliance away from hot surfaces.
- Make sure that the mains cable is not twisted or kinked when charging or storing.
- Never insert or allow objects to fall into the openings of the appliance.
- Only use and store the appliance in dry rooms.
- Never use the appliance where aerosol (spray) products are being used or where oxygen is released.
- To prevent injuries, never use the appliance if the blade set is damaged.
- Do not use disposable batteries. Rechargeable batteries should only be replaced at authorized Service Centres.
- **Before the appliance is used for the first time, it should be charged for approx. 16 hours.**
- The appliance is safety insulated and radio screened. It meets the requirements of EU Directive 2004/108/EC regarding electromagnetic compatibility and EC Low Voltage Directive 2006/95/EC.

Exhausted batteries/rechargeable batteries should not be disposed of in household waste. Dispose of them in completely discharged state in accordance with legal regulations.

Charging the battery
- Connect the appliance plug on the plug-in transformer to the charging stand socket (Fig. 1ⓐ).
- Connect the plug-in transformer into the socket (Fig. 1ⓑ).
- Switch off the appliance using the on/off switch (Fig. 2ⓑ).
- During charging, the charging indicator (C) is illuminated.·
- Recommendation: the battery should only be recharged when the performance of the appliance has deteriorated considerably. However, charging the battery for longer than the specified length of time will not cause any damage.
- It should take around 16 hours for the appliance to charge to full capacity.

Battery operation
- Switch on the appliance using the on/off switch (Fig. 2ⓐ) and, after use, switch it off again (Fig. 2ⓑ).
- With the battery fully charged, the appliance can be operated for up to 100 minutes, before needing to be charged again. This capacity is attained after approx. 5 - 10 charging cycles.
- Note: In case of insufficient maintenance of the blade set, the operating time can be reduced considerably.

Attaching / removing the attachment comb
- Slide the attachment comb on to the blade set in the direction of the arrow until it clicks into position (Fig. 3ⓐ).
- The attachment comb can be removed by pushing it in the direction of the arrow (Fig. 3ⓑ).

Cutting with attachment comb
The appliance can also be operated with an attachment comb. The attachment comb has 5 detent positions for adjusting the length of cut. The further the attachment comb is pushed in (retracted), the shorter the length of cut. The length of cut can be adjusted from 3 mm (Abb. 4ⓐ) to 6 mm (Fig. 4ⓑ).

Cleaning and Care
- Do not immerse the appliance in water!
- After each use, remove the attachment comb and use the cleaning brush to remove cut hairs from the housing opening and from the blade set. To do this, remove the blade set (Fig. 5ⓐ) and press the cleaning lever (Fig. 6). This allows the cut hairs that accumulate between the bottom blade and the top blade to be easily removed using the cleaning brush (**EASY CLEANING**).
- Only wipe the appliance with a soft cloth, which may be dampened slightly. Do not use solvents or abrasives!
- The blade set can be cleaned with hygienic spray, order no. 4005-7051.
  Do not use any other cleaning agents.
- For a long-lasting, good cutting performance, it is important to oil the blade set frequently (Fig. 7). Use only blade set oil for this purpose, order no. 1854-7935 (200 ml).
- Blade set oil and hygienic spray is available from your dealer or our Service Centre.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the blade set should be replaced.

Changing the blade set
- Switch off the appliance using the on/off switch (Fig. 2ⓑ).
- The blade set can be removed by sliding it away from the housing in the direction of the arrow (Fig. 5ⓐ).
- Replace the blade set by hooking it into the housing and pressing it down until it clicks into position (Fig. 5ⓑ).

Disposal in EU countries
Do not dispose of the appliance with domestic refuse. As part of the EU Directive governing the disposal of electrical and electronic equipment, the appliance is accepted free of charge by local waste collection points or recycling centres. Discharge batteries prior to disposal! Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Disposal in non-EU countries
- Please dispose of the appliance at the end of its service life in an environmentally friendly manner.
- Disconnect the plug-in transformer from the mains power supply and switch on the appliance to discharge the battery completely.
- Remove the blade set (Fig. 5ⓐ) and use a screwdriver to remove the screws in the opening of the housing (Fig. 8). Exert force to pull the housing parts apart and remove the entire drive with the PCB (Fig. 9).
- Pull battery off circuit board. If necessary, use a screwdriver to pry them off (Fig. 10).
- Take the batteries to an appropriate collection point.
- Once the batteries have been removed, the appliance may no longer be connected to the mains!

Guarantee
1. In addition to the claims under the law and/or contract of sale which arise from material defects, the rights arising from this guarantee are granted by the seller to the customer. These rights shall not be limited by the guarantee.
2. WAHL GmbH guarantees its small electrical appliances be free of any defects.
   Parts that are subject to wear and tear such as shaver foils, drive components, blade sets, attachment brushes, batteries or battery cells are not included in this guarantee.
   The guarantee is excluded if
   - the appliance has been misused or treated carelessly,
   - the appliance has been damaged due to excessive stress, incorrect use or external influence,
   - the defect has been caused by failure to observe the operating instructions,
   - a repair or a repair attempt has been carried out by personnel other than that of a WAHL GmbH factory or of an authorised point of sale.
3. The guarantee period is subject to the length of the statutory period of limitation for material defects of the domestic law of the country in which the appliance has been purchased; however, the maximum guarantee period is 3 years.
   The period shall commence at the time of delivery of the appliance from the seller to the purchaser.
   The place of purchase and the date of delivery shall be proven by submitting proof of purchase, for example, the sales receipt, invoice, delivery note or similar document.
4. WAHL GmbH shall eliminate at no additional cost any defects that occur during the guarantee period if we are notified in writing within three weeks of their occurrence. Repairs will be carried out at a WAHL GmbH factory or at a point of sale authorised by WAHL GmbH. WAHL GmbH is entitled to remedy the defect by delivery of a appliance identical in construction. Further claims of the customer arising from this guarantee, particularly claims for reimbursement of expenses, reduction, compensation for damages or the right of withdrawal, shall be excluded. Statutory or other contractual claims arising from material defects shall remain unaffected.
   The guarantee period shall not be extended if services are performed under the terms of the guarantee.
5. The parts replaced when carrying out the repairs under warranty or the appliance retained in case of replacement delivery shall become property of WAHL GmbH.
6. If our customer services are called upon without due cause, WAHL GmbH shall be entitled to charge the costs incurred to the customer.
7. In case any defects occur, please contact your dealer or the service centre in your country.

Wahl India Grooming Products Pvt. Ltd.
Office No. 201, 2nd Floor
X Cube, Opp. Fun Republic
New Link Road, Andheri (West)
Mumbai – 400 053 India
e-mail: customercare@wahl-india.in